



# HANGER LOCATIONS


## FOR 1-3/4" & 2" SPRINGS

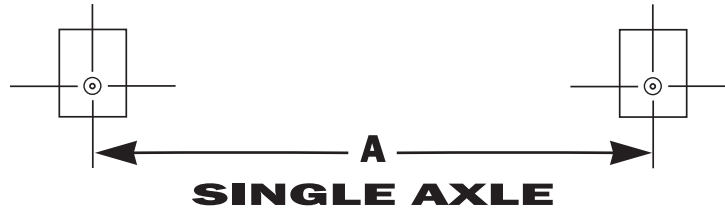

IF YOU USE THIS SPRING	DIM "A" IS
SW4B	24 - 3/4"
SW4	24 - 3/4"
SW5	24 - 3/4"
SW6	24 - 3/4"
E5226 (5-LEAVES)	25 - 1/2"
E5116 (6-LEAVES)	28"

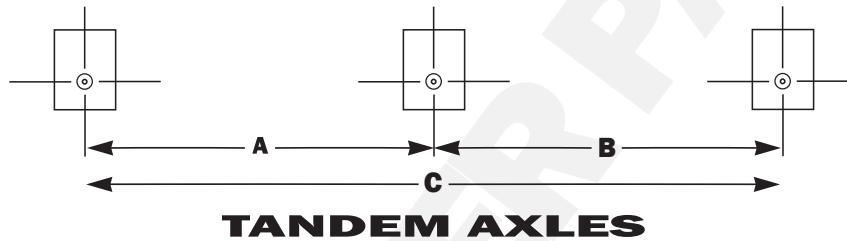

IF YOU USE THIS SPRING	DIM "A" IS	DIM "B" IS	DIM "C" IS
SW4B	29 - 1/2"	29 - 1/2"	59"
SW4	29 - 1/2"	29 - 1/2"	59"
SW5	29 - 1/2"	29 - 1/2"	59"
SW6	29 - 1/2"	29 - 1/2"	59"
E5226 (5-LEAVES)	29 - 3/4"	29 - 3/4"	59 - 1/2"
E5116 (6-LEAVES)	32"	32"	64"

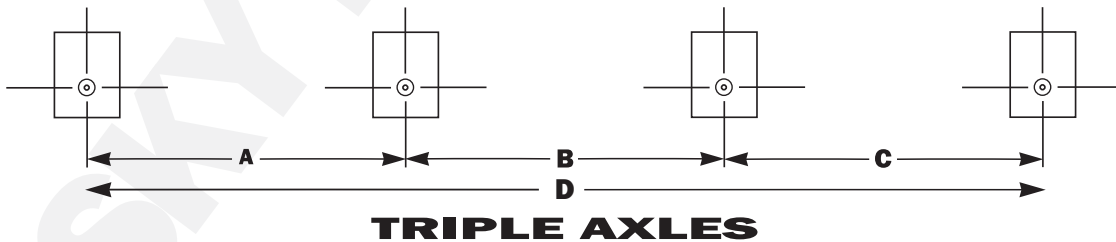

IF YOU USE THIS SPRING	DIM "A" IS	DIM "B" IS	DIM "C" IS	DIM "D" IS
SW4B	29 - 1/2"	34"	29 - 1/2"	93"
SW4	29 - 1/2"	34"	29 - 1/2"	93"
SW5	29 - 1/2"	34"	29 - 1/2"	93"
SW6	29 - 1/2"	34"	29 - 1/2"	93"
E5226 (5-LEAVES)	29 - 3/4"	34"	29 - 3/4"	93 - 1/2"
E5116 (6-LEAVES)	32"	36 - 1/2"	32"	100 - 1/2"